Report No. CR-700-9

Page 1 of 5

AIRPLANE FLIGHT MANUAL SUPPLEMENT

FOR

SOCATA TBM 700

HTIW

ENVIRONMENTAL CONTROL SYSTEM

REGISTRATION	NO.	
SERIAL NO.		

This supplement shall be attached to the applicable FAA approved flight manual when a Keith Products freon air conditioning system is installed in accordance with STC SA8107SW.

The information contained herein supplements the basic manual only in those areas listed herein. For limitation, procedures, and performance information not contained in this supplement, consult the basic flight manual.

APPROVED BY:

Manager, Special Certification Office

Federal Aviation Administration Fort Worth, Texas 76193-0190

FAA APPROVED: AUG 1 4 1992

REVISION .2

LOG OF REVISIONS

Original			
Revision 1 September 20, 1991			
Revision 2 Date: AUG 1 4 1992			
<u>Page</u> Rev	ision No.		
1 - 3	1		
1 - 5	 2 - Deleted Reference to Kit No.'s - Changed: "air conditioner" to "air conditioning 		
3	system" . 2 - Changed: "airconditioning" to two words "two evaporators" to "the evaporator(s)" "evaporator motors" to "evaporator motor(s)"		
	- Deleted reference to "air cond" circuit breaker callout of 15 amp		

APPROVED: JOS AMANAGER Special Certification Office

Federal Aviation Administration Fort Worth, Texas 76193-0190

FAA APPROVED: AUG 1 4 1392

REVISION 2

FAA APPROVED

AIRPLANE FLIGHT MANUAL SUPPLEMENT

TO

SOCATA TBM 700

SECTION I

INTRODUCTION

The air conditioning system is electrically powered; consisting of a compressor condenser assembly located in the tail cone and the evaporator(s) mounted below the floor.

SECTION II

OPERATING LIMITATIONS

1) Icing Conditions - activation of either the prop or wing anti-ice system automatically deactivates the air conditioner. The air conditioner can not be reactivated until both the prop and wing anti-ice have been switched to the OFF position.

SECTION III

EMERGENCY: In the event of an air condition/fan system failure or malfunction, the system should be deactivated as follows:

1) Air condition fan/selector switch.....OFF.

Note

The compressor, condenser and evaporator motor(s) may be deactivated by pulling the "air cond" circuit breaker. When air conditioner mode is deactivated, check that the blue advisory annunciation light is not illuminated.

ABNORMAL: Generator Failure (Generator off light on).

In the event of a generator failure in flight, the air conditioner compressor motor will automatically load shed.

1) The air conditioner/fan selector switch.....OFF.

Note

Check that the remaining generator load is within limits.

NORMAL: Air conditioning may be operated when ground power or aircraft electrical system is providing 28 vdc to the main buss. To operate system proceed as follows:

FAA APPROVED: AUG 1 4 1992

REVISION 2

- 1) Turn ON air conditioning with switch located on right side of instrument panel.
- 2) For maximum cooling, close door.3) Turn OFF air conditioning with switch.

FAA APPROVED

AIRPLANE FLIGHT MANUAL SUPPLEMENT

TO

SOCATA TBM 700

SECTION IV

No Change.

PERFORMANCE

SECTION V

No Change.

APPENDIX

SECTION VI

WEIGHT & BALANCE

FAA APPROVED: AUG 1 4 1992

REVISION 2

Administration

Southwest Region Arkansas, Louisiana, New Mexico, Oklahoma, Texas

Fort Worth, Texas 76193-0000

RECEIVED FEB - 2 1993

FEB 0 1 1993

Keith Products, Inc. 4554 Claire Chennault Dallas, TX 75248

Gentlemen:

Enclosed is the FAA-approved Flight Manual Supplement dated August 14, 1992, for the installation of an environmental control system in a Socata TBM-700 aircraft in accordance with STC SA8107SW.

Sincerely,

Ron/Dalton

Section Supervisor, Special Certification

Enclosure